


KW20B / KW20A

Cordless Kettle

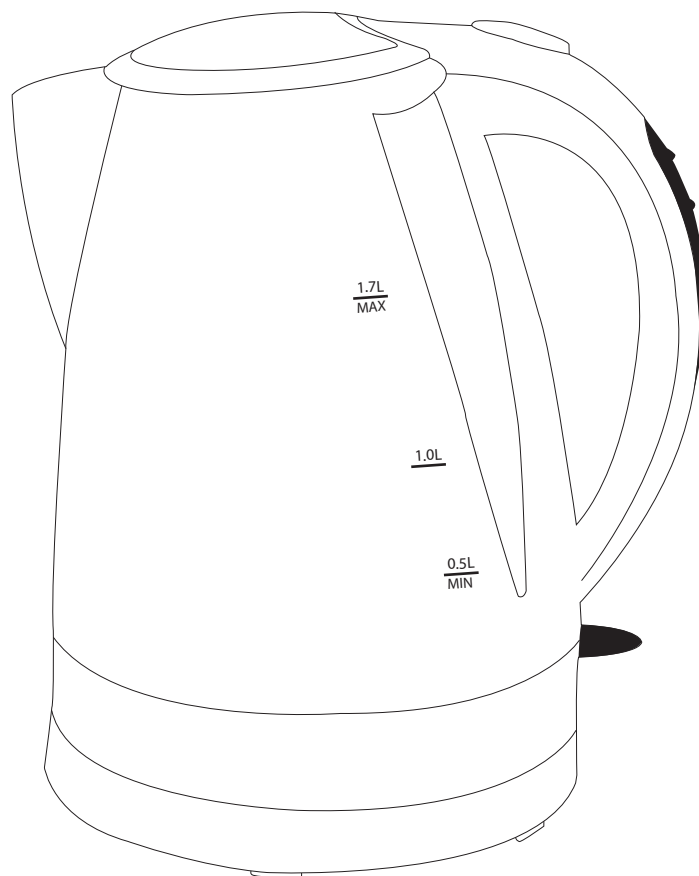

Made in China



INSTRUCTION MANUAL

Caution: Read and follow all safety and operating instruction before first use of this product.

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

WWW.CAMPOMATIC.COM

FEATURES:

1. Lid
2. Spout
3. Water level
4. Base station
5. Unlocking for the lid
6. Handle
7. On/Off switch with indicator light
8. Power cord with plug



General Safety Instructions

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliance, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the Campomatic Service Team, by our customer service or by a qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions”.

Special Safety Instructions for this Machine

- Use only cold water when filling.
- The water level must be between the MAX and MIN marks! If the water level exceeds the MAX level, boiling water and steam may be ejected, which might arise a hazard to the user.
- CAUTION-Ensure that the kettle is switched off before removing it from its stand.
- The kettle is only to be used with the stand provided.
- The appliance must not be immersed.
- The appliance can only be used for household only.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

First Use of the Machine

Please read these operating instructions carefully and keep them in a safe place. Before using for the first time, boil fresh water at least twice in the appliance. Use only water without any additives or ingredients.

Use

1. Place the machine on a flat surface.
2. Open the kettle by pressing the unlocking button on the handle. Then fill in some water. The water level can be read off using the water level indicator on the kettle. Please do not overfill the kettle.
3. Close the lid by releasing the unlocking button on the handle.
4. Place the kettle flush on the base

Electrical Connection

5. Switch the kettle on with the switch in the handle bottom. The indicator light turns up.
6. The kettle switches off automatically when the water has boiled. Now disconnect the kettle from the mains power supply. Always hold the lid closed when pouring the water out. Beware of scalding!

Cleaning

- Always pull out the plug from the socket before cleaning!
- The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

Decalcification

- The frequency of the decalcifying operation depends on the hardness of the water and on how often the appliance is used.
- If the machine switches off before the water boils, it probably needs to be decalcified.
- Please do not use vinegar but a commercially available decalcification agent on the basis of citric acid. Only use the quantities stated in the instructions.

Warranty Information

The warranty only covers defects on material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

ازالة الكلس

- مدى تكرار عملية ازالة الكلس يعتمد على صلابة المياه و على استهلاك الابريق.
- اذا توقف البريق من العمل قبل غليان الماء، ذلك يعني ان الابريق بحاجة الى تنظيفه من الكلس.
- لا تستعمل الخل بل هناك مادة مخصصة لازالة الكلس توجد في الاسواق مشتقة من الاسيد الستريك. استعمل الكمية المحددة فقط.

تعليمات السلامة الخاصة لهذا الجهاز:

يجب ان يكون مستوى الماء بين علامتين MAX و MIN ! اذا كان الابريق مملوءاً فوق العلامة، فهناك احتمال لفوران الماء خارج الابريق مما يسبب خطراً للمستهلك.

- تنبيه- تأكد من ان الابريق توقف عن العمل قبل نزعها من قاعدته.
- يستعمل الابريق فقط مع قاعدته.
- لا تغمر الجهاز بالماء.
- هذا الابريق للاستعمال المنزلي فقط.
- في حال حصول ضرر او تلف لكابل التغذية الرئيسي، يجب استبداله فوراً عن طريق كامبوماتك او مركز الصيانة المخول من قبل كامبوماتك لتجنب الاضرار التي قد تنجم عنه.
- تأكد دائماً ان الغطاء مغلق باحكام.
- لا تدع القاعدة و الجهة الخارجية للابريق تصبح رطبة.

اول استعمال للابريق

الرجاء قراءة هذا الدليل بعناية و احتفظ به في مكان امين. قبل اول استعمال، اغلي مرتين كمية كالمية من الماء. استعمل الماء فقط من دون اضافة اي مكونات.

طريقة الاستعمال

- أ. ضع الابريق على ارض مسطحة تماماً.
- ب. افتح الغطاء بالكبس على زر الغطاء. ثم املئ بالماء. مستوى الماء يقرأ من خلال مؤشر كمية الماء. الرجاء عدم تخطي المؤشر الاعلى.
- ت. سكر الغطاء بواسطة زر الغطاء الموجود على المسكة.
- ث. ضع الابريق على القاعدة.

التوصيل الكهربائي

- أ. شغل الابريق بواسطة مفتاح التشغيل. سوف يضوي المؤشر الضوئي.
- ب. يتوقف البريق من العمل تلقائياً عند الغليان. الآن افصل البريق من الكهرباء. دائماً فرغ الابريق و الغطاء مغلق.

التنظيف

- دائماً قبل التنظيف يجب فصل التيار!
- الجهة الخارجية للجهاز يجب تنظيفها، عند الضرورة، بقطعة قماش رطبة.

التصميم:

1. الغطاء
2. الفوهة
3. مؤشر لكمية الماء
4. قاعدة الابريق
5. زر فتح الغطاء
6. المسكة
7. مفتاح التشغيل/التوقيف مع مؤشر ضوئي



تعليمات السلامة العامة:


- اقرأ هذه التعليمات قبل استعمال الابريق و حافظ عليها بما في ذلك الكفالة و ايصال الشراء و اذا امكن العلبه.
- صمم الابريق لاستعمال منزلي فقط لا للاستعمال التجاري. لا تستخدم في الهواء الطلق الا اذا كان مصمماً لذلك.
- ابقى الابريق بعيداً عن مصادر الحرارة و اشعة الشمس المباشرة و الرطوبة (لا تغمر بالماء) و الحواف الحادة. لا تستعمل الجهاز بأيد مبتلة. اذا كان الجهاز رطب او مبتل بالماء، افصله فوراً من التيار الكهربائي. لا تضعه بالماء.
- عند تنظيفها او تخزينها، افصل من التيار الكهربائي و اسحب الكابل من القابس (لا تسحب من الكهرباء بواسطة الكابل). ان لم تكن تستعمل الجهاز اسحب جميع الملحقات.
- ليس هذا الجهاز للأشخاص (بمن فيهم الاطفال) مع انخفاض القدرات الجسدية و الحسية و العقلية، او عدم وجود الخبرة و المعرفة، الا اذا حصلوا على اشراف او تعليمات بخصوص استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- يجب مراقبة الاطفال لكي لا يلعبوا بالجهاز.
- ان هذا الجهاز مصمم للاستعمال في المنزل و لنفس الغايات في:
 - مطبخ الموظفين داخل المحلات و المكاتب...
 - المزارع
 - من قبل زبائن الاوتيلات الخ...
- لا تحاول اصلاح الجهاز بنفسك. دائماً استدع تقنياً مخول بذلك. في حال حصول ضرر او تلف لكابل التغذية الرئيسي، يجب استبداله فوراً عن طريق كامبوماتك او مركز الصيانة المخول من قبل كامبوماتك لتجنب الاضرار التي قد تنجم عنه.
- دائماً استعمل القطع الاصلية.
- دائماً طبق تعليمات الامان الخاصة.



كامبوماتيك

KW20B / KW20A

ابريق كهربائي

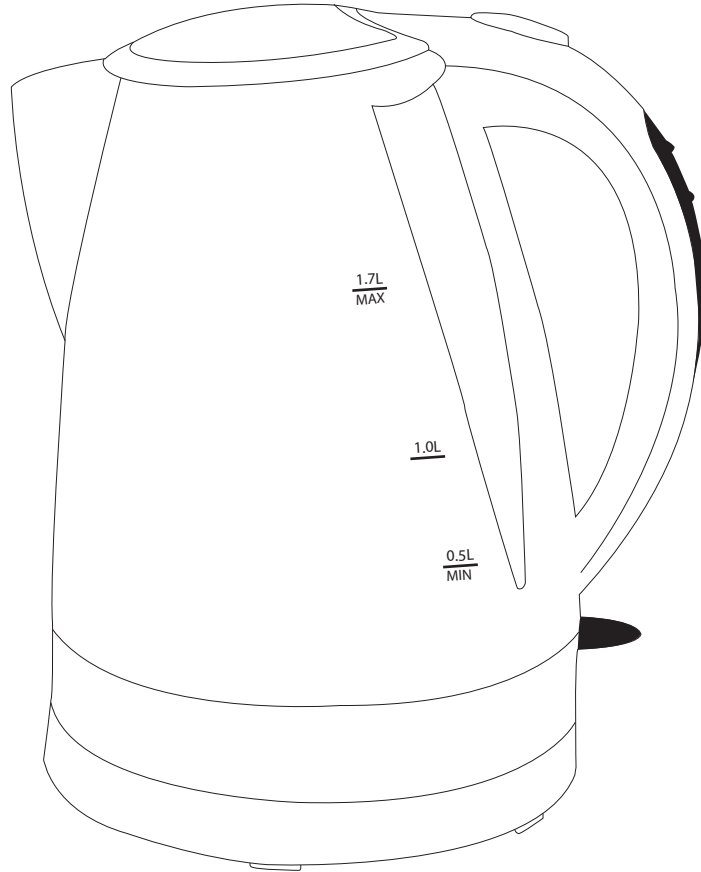

صنع في الصين



كتيب التعليمات

اقرأ كافة تعليمات السلامة والتشغيل وتقيّد بها قبل استخدام هذا المنتج للمرة الاولى

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

WWW.CAMPOMATIC.COM